

## **Changing the Assigned Member on a Pole Attachment Ticket**


1. To change the Assigned Member on a Pole Attachment (Attachment Request – PA) ticket, Open the ticket and click the Actions icon. The current Assigned member is circled below.

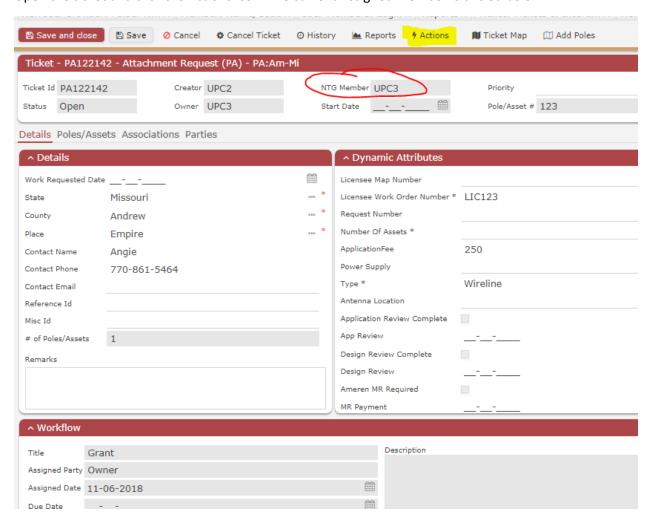

2. Select Workflow - Change Assigned

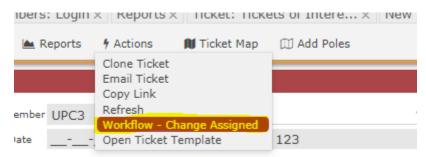

3. Select the member code from the drop down and click Assign.

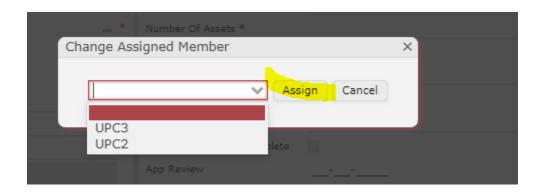

The assigned member will be updated.

